



# Sony TCM-919 Cassette-Corder Speaker Replacement

This guide aims to provide instruction concerning the replacement of the speaker for the Sony TCM-919 Cassette-Corder.

Written By: Marygayle Martin



## INTRODUCTION

This guide aims at instructing Sony TCM-919 owners on the process required to replace the speaker component of the device. If the speaker is producing sub-optimal sound or no sound at all, this guide can be advantageous.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [Sony Personal Media Player Speakers](#)  
[Part #: 1-504-200-11](#) (1)

## Step 1 — Remove Battery Cover



- Turn the device around so that the back cover is facing upward. Use your thumbs to press firmly down and then push the battery door cover open.
- Remove any batteries.



## Step 2 — Remove Back Casing



- Remove the 5, 5.95mm screws as indicated in the picture.





### Step 3 — Desolder Speaker Wires

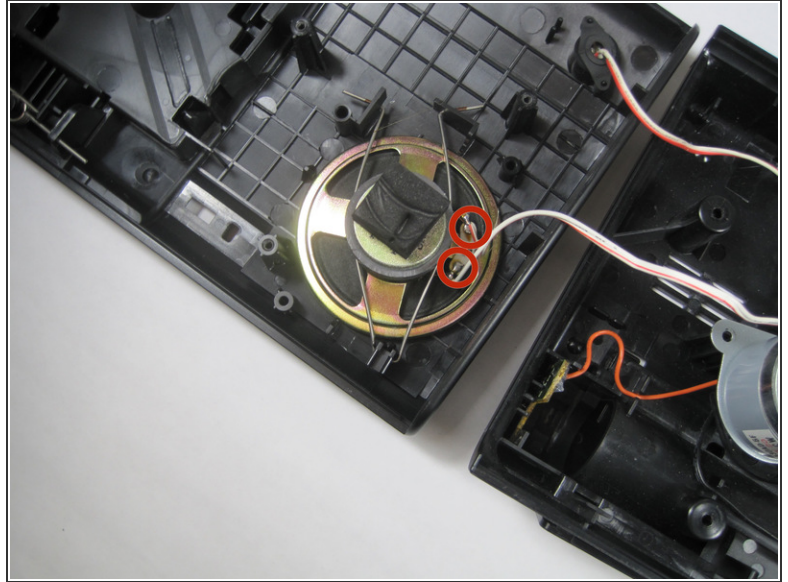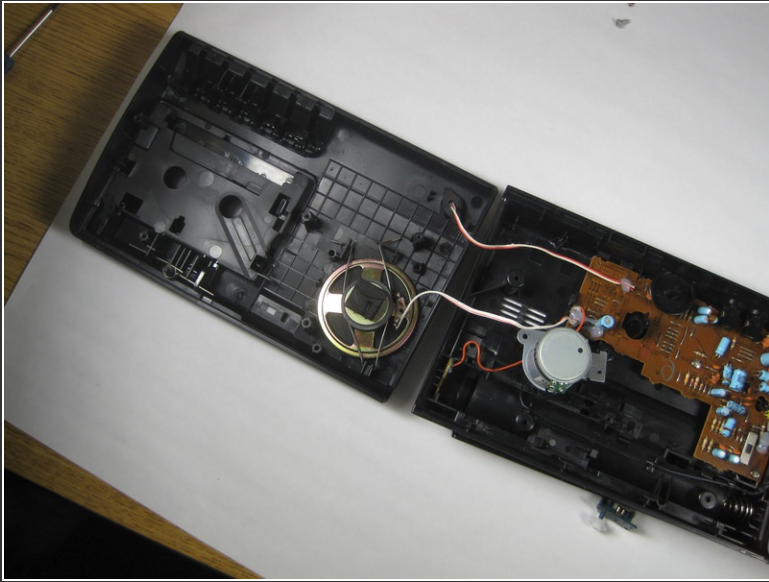

- Look to the back of the top cover.
- Desolder the two wires from the speaker.

### Step 4 — Remove Speaker

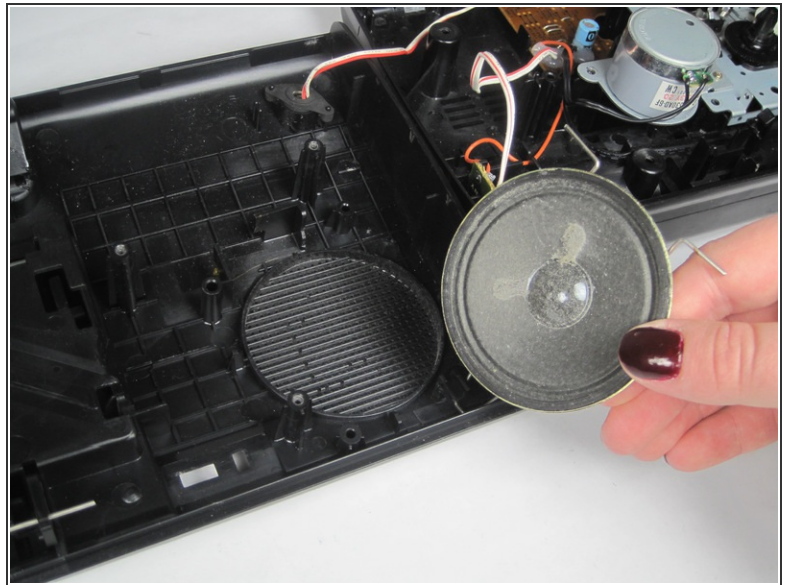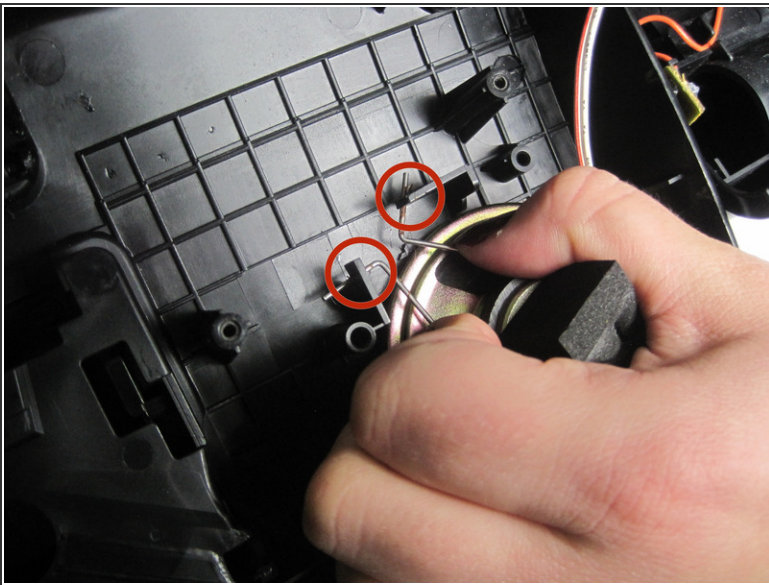

- Squeeze the two prongs holding the speaker in place and remove the metal piece.
- Remove the speaker by gently lifting it up from the cover and pulling.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:17:30 AM.